

## SYSTEM DESIGNED FOR BIG AND HEAVY SLIDING WOODEN DOORS

Retrac system is the best solution for the installation of sliding wooden doors (up to 170 Kg).

Retrac stands out for its minimalist design and for the spaciousness of the light space that it manages to provide in interior spaces.



### V-5670/170Soft/Retrac





Art. List: 5658 x1 | 2958 x1 | 2200/PC x2 | 2467 x2 | 2209 x2 | 5667 x2 | 2206/R x1  
2204 x1 | 2090 x1 | 3308 x1




#### Sistema Easy-on 360 | 360 Easy-on system

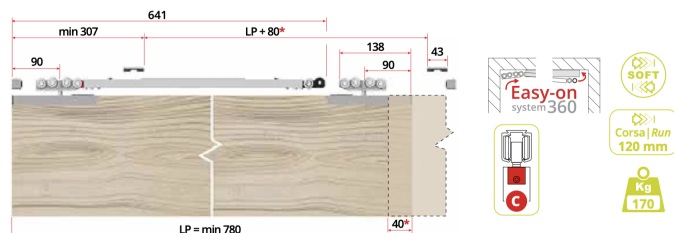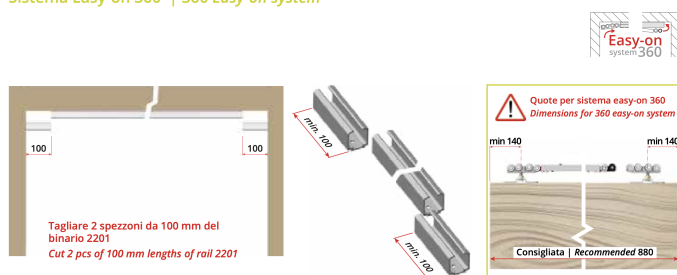

#### Sequenza di montaggio sistema Easy-on 360 | 360 Easy-on system assembly sequence

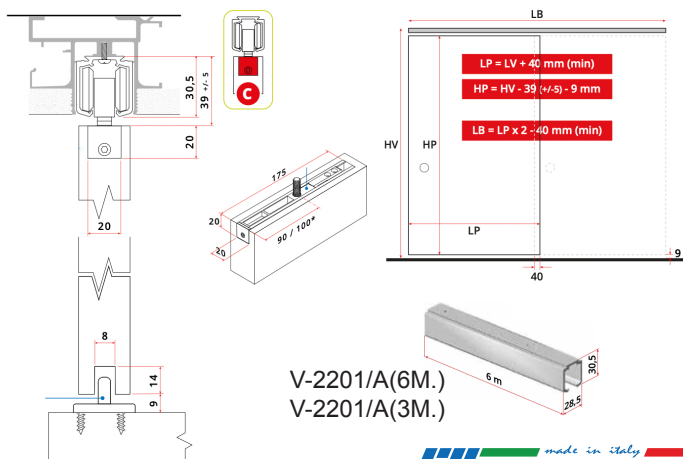
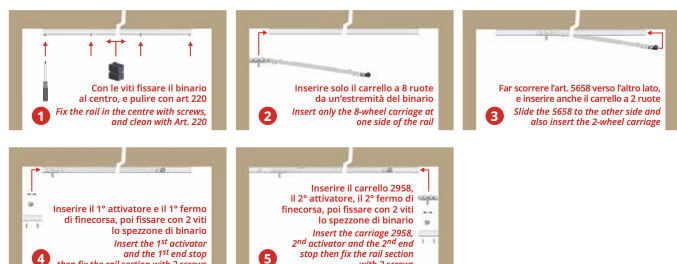


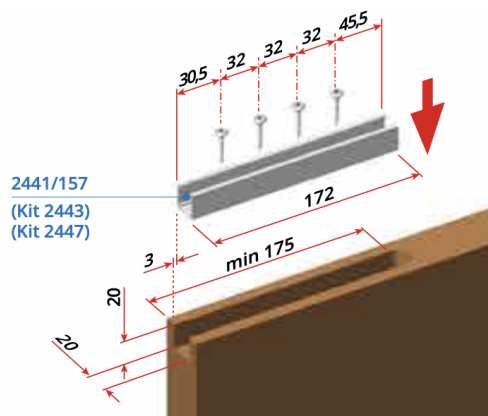

1

Fissare la staffa in alluminio (art. 2441/157) alle due estremità della porta.

*Fix the aluminium bracket (art. 2441/157) at both ends of the door.*

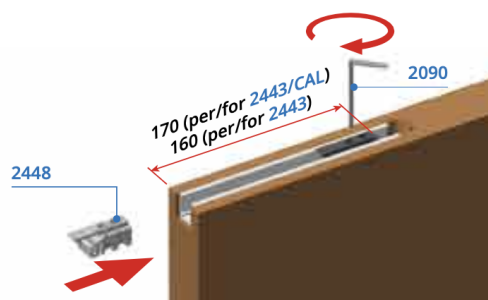

2

Fissare in fondo alle staffe in alluminio il blocchetto di aggancio art. 2448.


*Fix the hooking block art. 2448 at the bottom of the aluminium brackets.*



3

Dopo aver inserito i carrelli nel binario posizionare la porta in corrispondenza dello stesso ed inserire le slitte nelle staffe spingendole fino al click di aggancio avvenuto.



*After putting the carriages into the rail, place the door at the rail and insert the slides into the brackets, pushing them until the hooking click.*

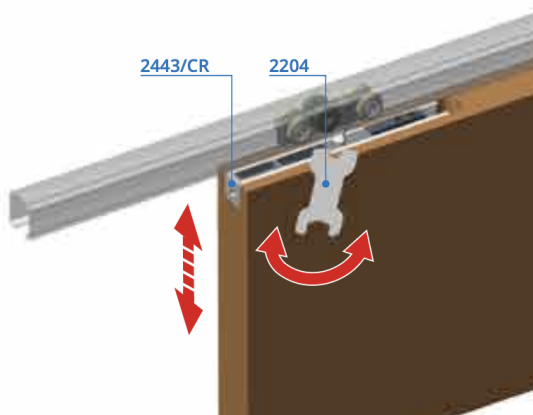

4

Regolare la perpendicolarità agendo con l'utensile indicato art 2204

*Adjust the perpendicularity using the indicated tool art 2204*

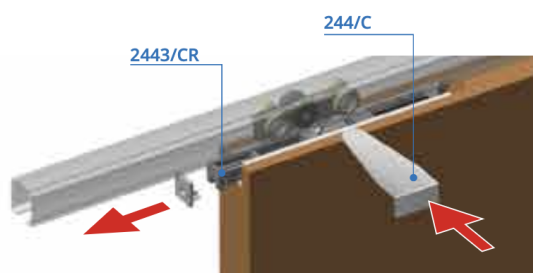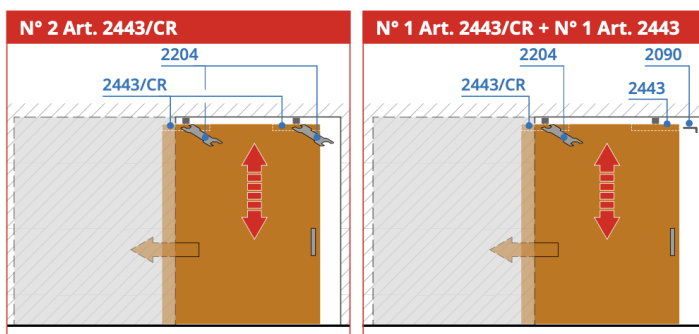

5

Per l'eventuale sganciamento del carrello, inserire l'apposito attrezzo a corredo (art. 244/C) come indicato nella figura.

*For an eventual unhooking of the carriage, please insert the proper tool (art. 244/C) as indicated in the picture.*